



## Polycom® VVX® 300 and VVX® 310 Business Media Phones

### Quick User Guide

For use with Polycom® UC Software 4.1.4 or later

The information in this guide applies to both the VVX 300 and VVX 310 phones. Configurations vary and the screen displays used in this guide may not reflect those on your phone. See your system administrator for more information. For detailed information on how to use your phone, see the Polycom VVX 300 and 310 Business Media Phone User Guide, available by navigating to your phone's Support page from [Polycom Voice Support](#).

[www.polycom.com](http://www.polycom.com) | 1725-49087-001 Rev. A | March 2013

© 2013, Polycom, Inc. All rights reserved. POLYCOM®, the Polycom logo and the names and marks associated with Polycom's products are trademarks and/or service marks of Polycom, Inc. and are registered and/or common law marks in the United States and various other countries. All other trademarks are property of their respective owners. No portion hereof may be reproduced or transmitted in any form or by any means, for any purpose other than the recipient's personal use, without the express written permission of Polycom.

### Phone Views


Your phone has four main Views: Home, Calls, Active Call, and Lines view (the default). You can access Home and Lines view at any time. If your phone has one or more calls, you can also access Calls or Active Call view.

For Home view from any menu, press

Press to alternate between Home and Lines view.

### Home View

Home view displays icons you can select to access phone functions.

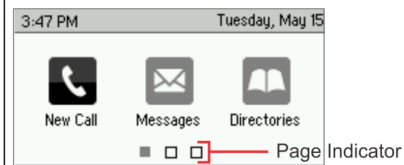

You can use the right, left, up, and down arrow keys to display more icons.

### Lines View

Lines view displays phone Lines, Favorites, and soft keys.



If your phone is idle, you can press the Line key to access the Dialer.




#### Tip: Referring to Soft Keys

In this guide, soft keys are referred to by their name only. For example, to end an active call, press **End Call**.

### Calls View

If your phone has one or more calls, you can access Calls view.

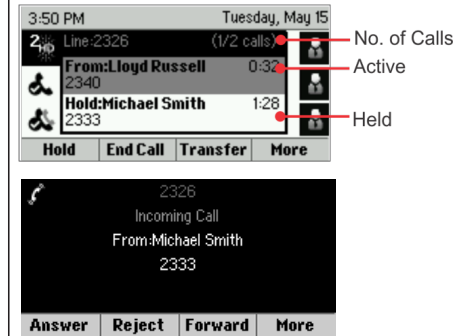

Call color indicates status:

- **Medium grey**—Active call
- **Dark grey**—Incoming call
- **White**—Held call

Use the up and down arrow keys to select a call (highlight it). The soft keys control the highlighted call.

### Entering Data

Use the dialpad keys to enter information. To backspace, press **Backspace** .

To type with the dialpad keys, press a key repeatedly to view the character options and stop to select.

To type other characters, press **Encoding** or **Mode**. When using the dialpad keys, use the **1**, **\***, **0**, and **#** keys.

### About Calls

Only one call can be active at one time.

You can use the handset, speakerphone, or headset for calls. During a call, you can change modes by picking up the handset, or by pressing or .

If you navigate away from your call(s), press to see Active Call or Calls view again.



#### Tip: Switching Between Lines and Calls View

When in Calls view, switch to Lines view by pressing **More > Lines**.

Switch back to Calls view by pressing **More > Calls**.

### Placing Calls

Pick up the handset, or press or . Enter the phone number, and press **Send**.

Or enter the phone number first, then press **Dial**, pick up the handset, or press or .

From Lines view: Press the phone Line key, enter the phone number, and press **Send**.

From Home view: Select **New Call** using the left and right arrow keys. Enter the phone number, and press **Send**.



#### Timesaver: Placing Calls Quickly

Select a recent call or Favorite, or select a contact's phone number in the Contact Directory.

### Answering Calls

To answer with the speakerphone, press or tap **Answer**. To answer with the handset, pick up the handset. To answer with a headset, press .

To answer a new call while on an active call, press **Answer**. The current call will be held.

### Ending Calls

To end an active call, replace the handset, press or press . Or, press **End Call**.



To end a held call, navigate to Calls view and highlight the held call. Press **Resume**, and press **End Call**.

### Holding Calls

From Calls view, press **Hold** or . Remember to highlight the call first.

To resume a held call, press **Resume** or again.

## Transferring Calls

From Calls view, press **Transfer** or , and call the other party. When you hear the ringback tone, or after you talk with the other party, press **Transfer** or  again. Press **Blind** to complete a transfer without waiting for the ringback tone.

## Forwarding Calls

To enable call forwarding, press **Forward** from Home or Lines view. Select the forwarding type to enable, enter a forwarding number, and press **Enable**.

To disable call forwarding, press **Forward** from Home or Lines view, select the forwarding type to disable, and press **Disable**.

To enable per-call forwarding: As your phone rings, press **Forward**, enter the forwarding number, and press **Forward**.

## Placing Conference Calls

Call the first party, and after the call connects, press **More**, and select **Confrc**. Then, dial and connect with the second party and press **Confrc** again.

From Lines or Calls view, you can:

- Press **Hold** to hold all participants.
- Press **End Call** to remove yourself from the call, but keep the other participants connected.
- Press **Manage** (if available) to manage each participant.
- Press **Split** to end the conference and hold all participants.




### Timesaver: Placing Conference Calls

If you have an active and held call, press **Join** to set up a conference.


## Favorites

Favorites are contacts you call most often. Your Favorites list displays all your Favorites. A smaller number of Favorites displays in Lines view.

- **To view your Favorites list**—From Home view, press  and select **Directories> Favorites**.
- **To make a contact a Favorite**— Navigate to your Contact Directory and select the contact. Press **Info**, press **More**, and select **Add to Favorites**. Press **Yes** to confirm.
- **To dial a Favorite**—Press the Favorite from Home or Lines view, or from your Favorites list.


## Viewing Recent Calls

From Lines view, do one of the following:

- Press , select **Directories**, and select **Recent Calls** to view your Recent Calls list.
- Press the right arrow key to view the recent Placed Calls.
- Press the left arrow key to view the recent Received Calls.
- Press the down arrow key to view the recent Missed Calls.
- Press the up arrow key to view Favorites.

From the Recent Calls list, press **Sort** to sort and order calls, press **Type** to display only certain calls, or select a call record to call the person.

## Contact Directory

To select a contact from the Contact Directory, press .

- **To view your Directory**—Select **Directories** from Home view. Press **Contact Directory** on the Directory screen.
- **To add a contact**—Navigate to your Contact Directory and press **Add**. Enter the contact's information, and press **Save**. To make a contact a Favorite, enter a *Favorite Index* number.
- **To update contact information**—Navigate to your Contact Directory and select the contact. Press **Info**, press **Edit**, update the contact's information, and press **Save**.



- **To delete a contact**— Navigate to your Contact Directory and select the contact. Press **Info**, press **Delete**, and press **Yes** to confirm.
- **To search for a contact**—Navigate to your Contact Directory and press **Search**. Enter search criteria and press **Search**.
- **To dial a contact from your Directory**— Navigate to your Contact Directory and select the contact. From the contact's information screen, select the contact's phone number.




### Tip: What Does the Star Mean?


A star, ★, indicates a Favorite.

## Listening to Voicemail

An envelope, , adjacent to a Line key, indicates that you have voicemail. Select **Messages** from Home view or press , and select **Message Center**. Press **Connect** and follow the prompts.


## Muting the Microphone

During a call, press  so other parties can't hear you.



To disable Mute, press  again.

This applies to calls using the handset, headset, and speakerphone.

## Using Do Not Disturb

To enable or disable ringing, press **DND** from Home or Lines view. When Do Not Disturb is enabled, the DND icon, , displays in the status bar and beside the appropriate Line key.

## Adjusting Volume


To change call volume, press  during a call. To change the ringer volume, press  when the phone is idle or ringing.

## Updating Ringtones

To change the incoming call ringtone, select **Settings** from Home view, and press **Basic > Ring Type**. Select the ringtone you want.

To set a ringtone for a contact, navigate to your Contact Directory and select the contact. Press **Edit**, update the contact's ring type, and press **Save**.

### Logging In For The First Time

The system has been designed to guide you through the process of setting up your new voice mailbox. Press the  button on your telephone to begin this process. Enter your temporary PIN (**provided by your FirstLight Representative**) followed by **#**

### Your New Voice Mail PIN (Password) Must:

- Be between 6 and 20 characters long.
- Not have a single digit repeated more than 2 times in a row.
- Not be a numeric sequence, e.g. 12345 or 54321.
- Not contain, or match part of, a telephone number associated with this account.

### Retrieving Your Messages

From your telephone: Press the  button and enter your PIN

### From Away

Dial your telephone number and press **\*** during your greeting. Enter your PIN.

### Voice Mail Main Menu Options

- Listen to your Voice Messages . . . . . press **1**
- Create a New Message . . . . . press **2**
- Work with Greetings Menu . . . . . press **3**
- To Change Mailbox Settings . . . . . press **4**
- Reminders . . . . . press **5**
- Review Erased Messages . . . . . press **6**
- Login to a Different Mailbox . . . . . press **7**

### Options During/ After Message Playback

- 1** . . . . Play message again from the beginning
  - 2** . . . . Save message and go to the next message  
(This will store the message and mark it a “saved” message)
  - 3** . . . . Erase message
  - 4** . . . . to Reply
  - 5** . . . . to send a copy
  - 8** . . . . Pauses the playback of the message for up to 20 seconds;  
Pressing 8 again resumes playback
  - 9** . . . . Speeds playback of message
  - 77** . . . . Rewind 5 seconds
  - 99** . . . . Fast forward 5 seconds
- Press **#** to skip to the next message  
Press **\*** to return to previous menu